

1. For mmi 5F you have to change in text coding:

Text-Coding

No.	Name	Type	Data	Parameter
97	byte_21_Bus_Handling	TABLE	0	default_handling
98	byte_21_Scrolling	TABLE	0	Off
99	byte_21_Messaging_via_MAP	TABLE	0	Off
100	byte_21_Pagewise_scrolling	TABLE	0	Off
101	Reserved	RESERVED	0	
102	byte_22_Dashboard_Graphic_Variant	TABLE	0	MOST
103	byte_22_Dashboard_Text_Replacement	TABLE	0	Off
104	Reserved	RESERVED	0	
105	byte_22_wheel_drive	TABLE	0	front
106	byte_23_Speller	TABLE	0	Off
107	byte_23_Initial_Disclaimer	TABLE	0	Off
108	byte_23_Legal_Disclaimer	TABLE	0	Off
109	Reserved	RESERVED	0	
110	byte_24_Emergency_Call	TABLE	0	Off
111	byte_24_Voice_Control_System	TABLE	0	Not activated
112	byte_24_Navigation_System	TABLE	0	Not activated
113	byte_24_WLAN_Module	TABLE	0	Not activated
114	byte_24_Import_Media_Data	TABLE	0	Not activated
115	byte_24_Ripping_Media_Data	TABLE	0	Not activated
116	byte_24_vza	TABLE	1	activated
117	byte_24_psd	TABLE	0	Not activated

Tester no: 12345 Workshop no: 123

Importer No: 123 BaseVariant only

Start coding! Close

NOTE: check BaseVariant only !!

2. In MMI 5F adaptation:

Set Calibration Data for UDS ECUs

List of possible calibration variables

- 9253 = CD eject button
- 9279 = Developer mode
- 15361 = Transfer of release code for a SWaP function
- 15362 = Selection of release codes for a SWaP function
- 1291 = p_HMI_Display
- 1292 = p_damping_Display
- 2885 = Dimming_Ambient_Illumination_Operating_and_Display_Unit
- 2887 = Dimming_Illumination_for_Display_Unit
- 2889 = Country identification, country of sale
- 1287 = FM_Delay_Adaption
- 2306 = Activating and deactivating all development messages
- 2858 = Satellite radio, regional code
- 2886 = Dimming_Functional_Illumination_for_Operating_Unit
- 2859 = Parameter for connection transfer (UMTS)
- 2878 = Operating_and_Display_Unit_1_Proximity_Sensor_Basic_Adaptat
- 8877 = Vehicle configuration
- 2386 = IDE09570**
- 2876 = Car_Function_Adaptations_Gen2
- 1282 = Testmode_Video_speed_cutoff
- 1293 = Audio_Management_Audio_Delay_Lines
- 9245 = Base volume of speech output

BaseVariant only


Variable parameters

No.	Name	Type	Data	Parameter
61	Reversible_Seat_Belt_Tightener_...	TABLE	0	Comfort data b
62	Passanger_Seat_0x20	TABLE	0	Not activatec
63	Passanger_Seat_0x20_msg_bus	TABLE	0	Comfort data b
64	traffic_sign_recognition_0x21	TABLE	1	activated
65	traffic_sign_recognition_0x21_m...	TABLE	3	Databus extend
66	weariness_rcognition_0x22	TABLE	0	Not activatec
67	weariness_rcognition_0x22_msg...	TABLE	0	Comfort data b
68	BCmE_0x23	TABLE	0	Not activatec
69	BCmE_0x23_msg_bus	TABLE	0	Comfort data b
70	Angle_Of_Slope_0x24	TABLE	0	Not activatec
71	Angle_Of_Slope_0x24_msg_bus	TABLE	0	Comfort data b
72	Battery_Management_0x25	TABLE	0	Not activatec
73	Battery_Management_0x25_msg...	TABLE	0	Comfort data b
74	Brake_0x26	TABLE	0	Not activatec
75	Brake_0x26_msg_bus	TABLE	0	Comfort data b
76	Start_Stop_reasons_0x27	TABLE	0	Not activatec
77	Start_Stop_reasons_0x27_msn	TABLE	0	Comfort data b


Tester no. 12345 Workshop no. 123 Manual Set Start!

Importer no. 123 ECUreset Close


and

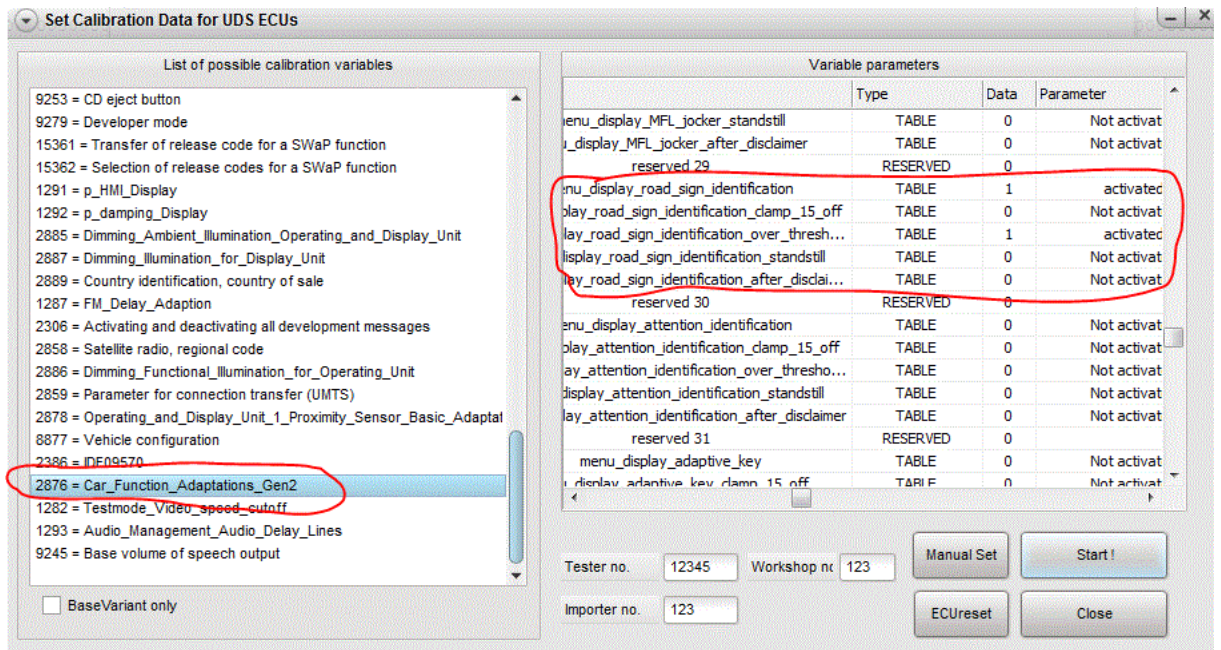

3. In A5 - Front Sensors Driver Assistance System change in text coding:

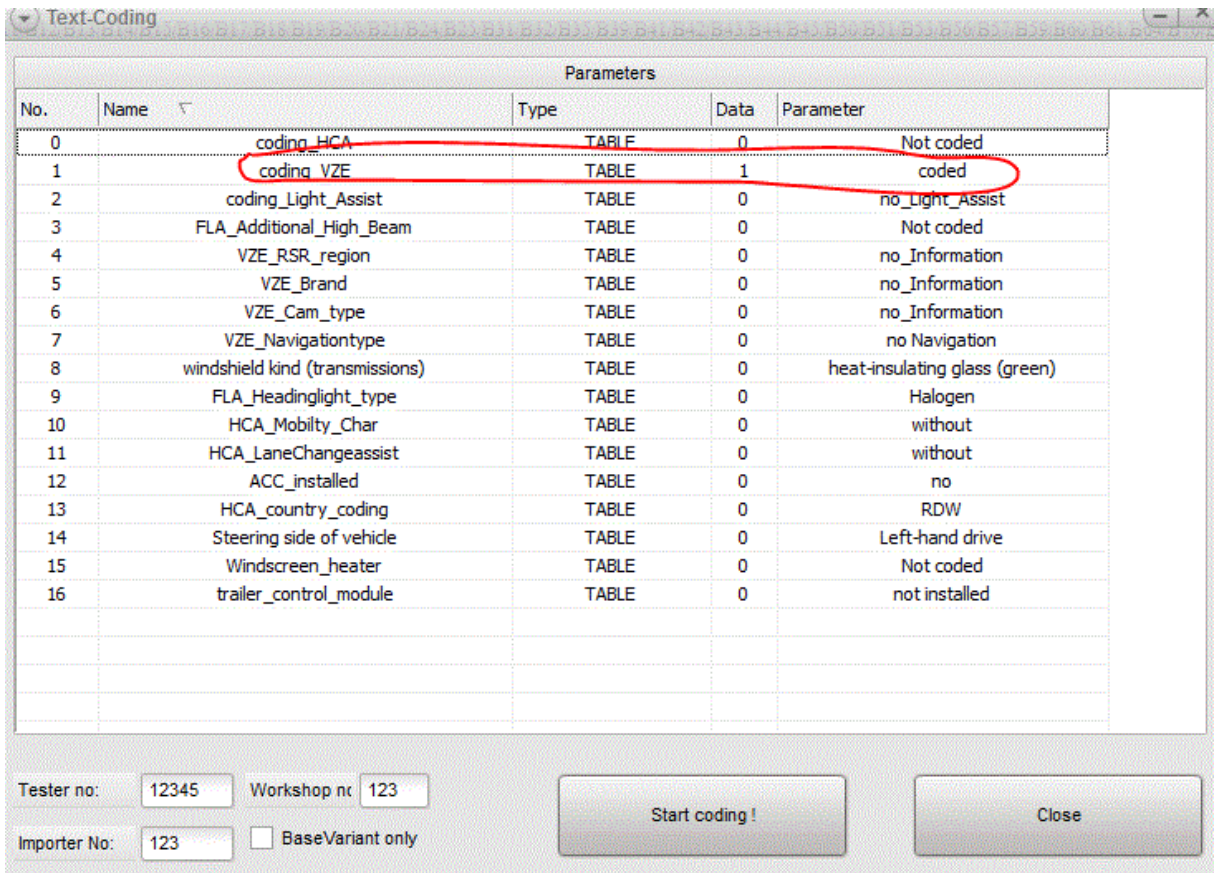

4. In instruments 17 text coding:

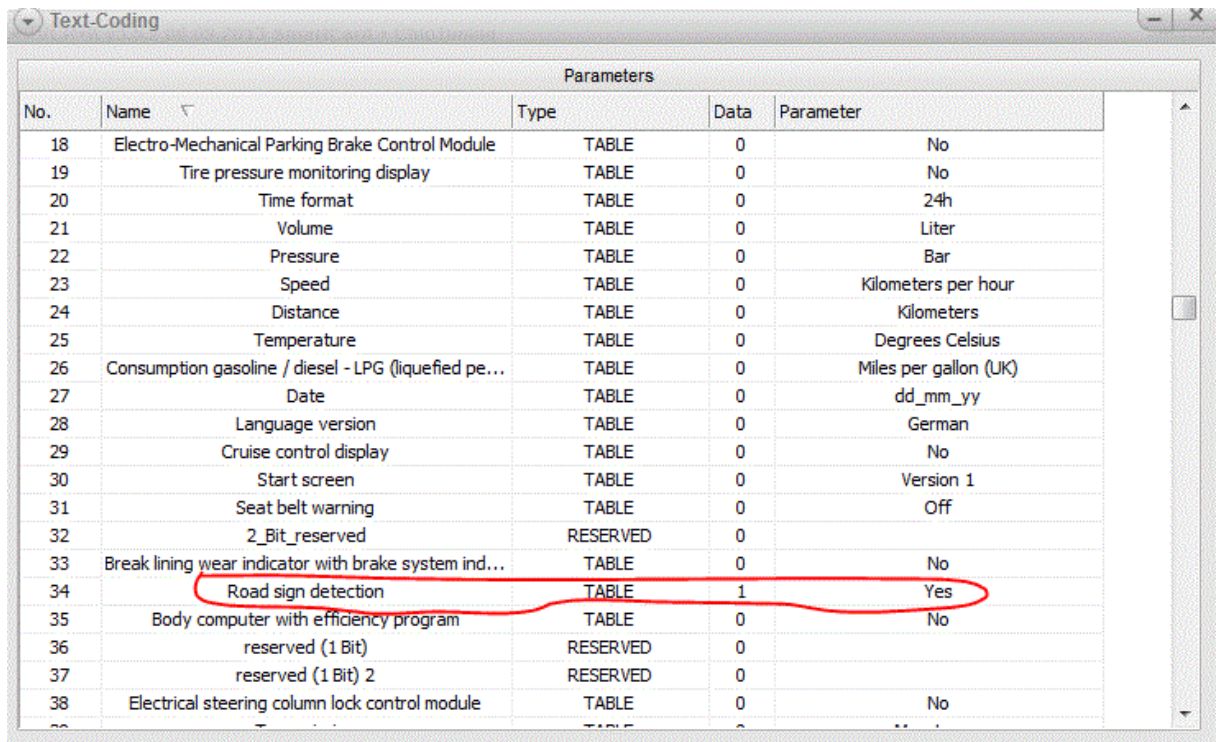

No.	Name	Type	Data	Parameter
18	Electro-Mechanical Parking Brake Control Module	TABLE	0	No
19	Tire pressure monitoring display	TABLE	0	No
20	Time format	TABLE	0	24h
21	Volume	TABLE	0	Liter
22	Pressure	TABLE	0	Bar
23	Speed	TABLE	0	Kilometers per hour
24	Distance	TABLE	0	Kilometers
25	Temperature	TABLE	0	Degrees Celsius
26	Consumption gasoline / diesel - LPG (liquefied pe...	TABLE	0	Miles per gallon (UK)
27	Date	TABLE	0	dd_mm_yy
28	Language version	TABLE	0	German
29	Cruise control display	TABLE	0	No
30	Start screen	TABLE	0	Version 1
31	Seat belt warning	TABLE	0	Off
32	2_Bit_reserved	RESERVED	0	
33	Break lining wear indicator with brake system ind...	TABLE	0	No
34	Road sign detection	TABLE	1	Yes
35	Body computer with efficiency program	TABLE	0	No
36	reserved (1 Bit)	RESERVED	0	
37	reserved (1 Bit) 2	RESERVED	0	
38	Electrical steering column lock control module	TABLE	0	No

After restarts it should work :)

Good luck !!!